


# DISH SANITIZER INSTRUCTIONS

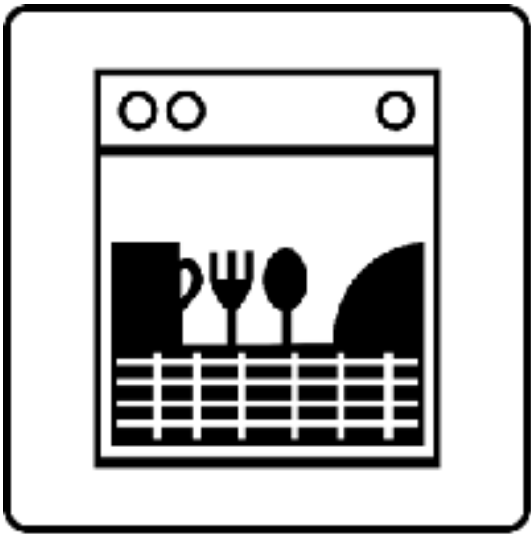

THIS APPLIANCE IS A SANITIZER - PLEASE FILL WITH HAND-WASHED, THOROUGHLY RINSED, HEAT TOLERANT DISHES AND UTENSILS!

- Check that the sanitizer is empty and the bottom of the sanitizer is clean.
- Press the **POWER** button - the sanitizer will begin filling with water. This will take a few minutes.
- When the water flow stops, press the **START** button. The sanitizer will heat the water to 180 F. There is no need to add soap.
- When the sanitizer is ready to be used, the **START LIGHT** will go out. Fill the sanitizer racks with clean dishes/utensils/cups.
- The sanitizer cleans one rack at a time. Put a single loaded rack in, close the door, and press the **START** button. The **START LIGHT** will be lit while working and go out at the end of a 2 minute cycle.
- Open the door carefully as water, steam and dishes inside the machine remain **VERY HOT!** Take care if wearing glasses as they will steam up. Removed the cleaned tray.
- Reload with another rack of washed items. Press the **START** button with the addition of each new rack.
- When you are done, please empty the dishwasher. Press and hold the **POWER** button for several seconds. This will signal the appliance to power down.

There is an Extended Wash button that should only be used if absolutely necessary-it will keep washing until the button is released.